


Effects Loop Modification


The images below show how the effects loop in your amp can be modified to run in series. The default factory setting is parallel.

Please note that this modification must be made by qualified Markbass service personnel only.

PARALLEL CONNECTION

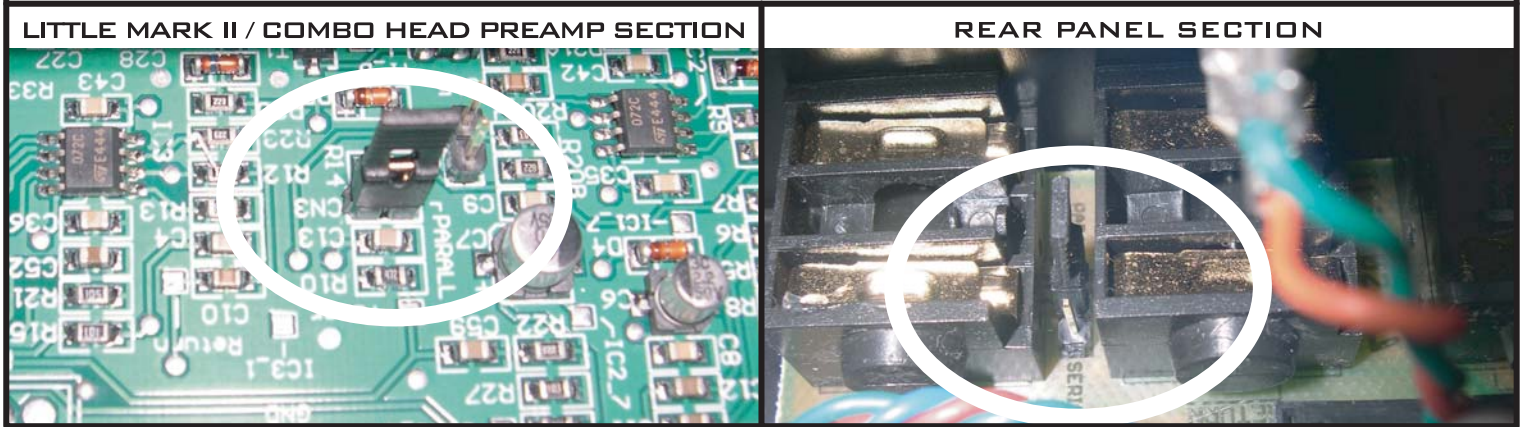

SERIAL CONNECTION

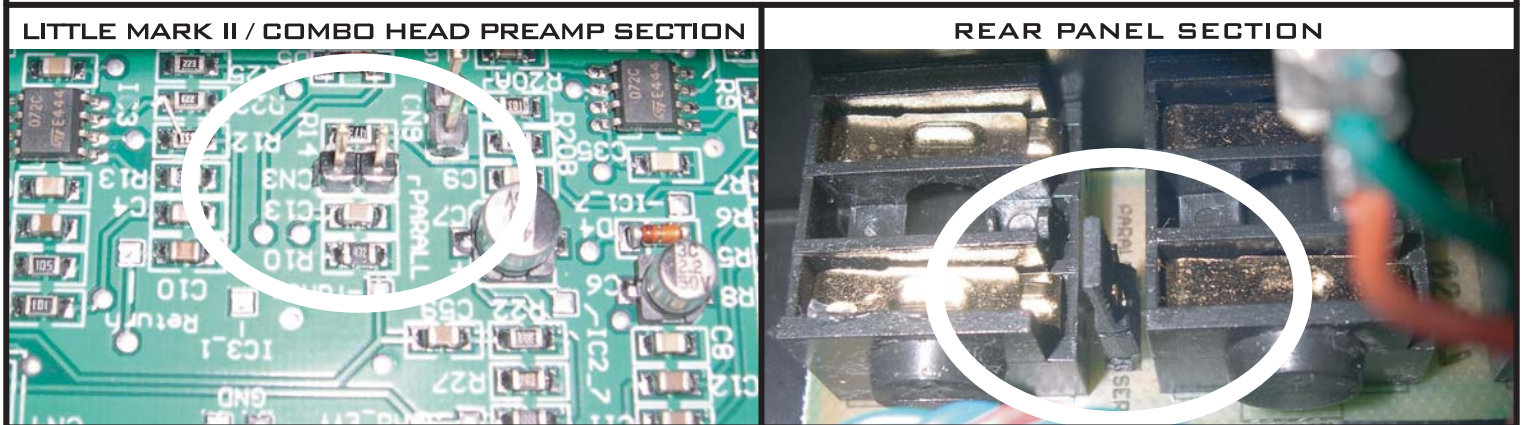

DI Output Modification

The images below show how the DI output in your amp can be modified to run in PRE equalization. The default factory setting is POST-EQ.

Please note that this modification must be made by qualified Markbass service personnel only.

POST-EQ

PRE-EQ

LITTLE MARK II / COMBO HEAD PREAMP SECTION

